



T-Mop™



Micronova's series of **T-Mop™** Cleanroom Covers are rounded covered sponges that are ideal for cleaning ceilings, easily roll down walls, soft wall enclosures and are excellent for room surfaces and equipment exteriors. The covers fit onto the T-Mop adapters designed with a 180° swivel to aide in cleaning awkward corners, tight spaces, under and around equipment. Available in three different lengths for each of the fabric options which include microfiber, textured or smooth knit polyester fabric, and a textured polyamide. Versions with thicker foam layer hold more disinfectant.

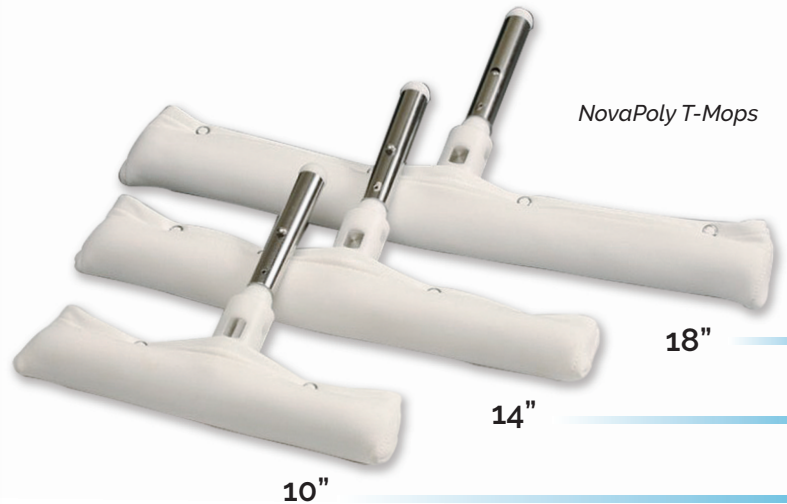

- T-Mop slip covers have stainless steel snap fasteners
- Excellent for cleaning room surfaces, equipment exteriors or interiors
- 180° swivel T-Mop adapter easily fits in hard to clean places
- Available with extra thick foam
- Gamma irradiated for aseptic areas and equipment
- Holds up to strong disinfectants
- Autoclavable

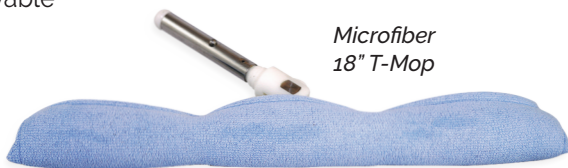

Manufactured for use in Controlled Environments

- ISO 5 thru 9 Cleanrooms
- ISO 9001 Certified Manufacturing Facility
- Autoclavable
- Good chemical resistance to disinfectants
- Minimum Irradiation Dose: 25 kGy
10⁻⁶ Sterility Assurance Level
- In compliance with AAMI Guidelines for Sterilization (if applicable)

SPECIFICATIONS

Materials of Construction:

Inner Layer: Urethane Foam - polyester

Cleaning Surfaces:

NovaPoly™: 100% Smooth polyester knit provides excellent disinfectant dispersal

PolySorb™: 100% Textured polyester assists in removing residues and dispersing disinfectant

MegaTex™: 100% Non-woven polyamide cleaning surface has mild abrasive properties yet absorbent

Microfiber: 80% Polyester, 20% polyamide mop is highly absorbent and effective in dry and wet mopping

Dimensions:

Width: 2.5 in (6 cm)

Length: 10 in, 14 in, or 18 in (25 cm, 35 cm, or 45 cm)

Diameter (on T-Mop):

Standard: 1/2" (3.8 cm) Thick: 2.5" (6.3 cm)

Weight or Capacity, if applicable:

Mop on adapter 1.5 lb (0.68 kg)



Micronova Manufacturing, Inc.
3431 W. Lomita Boulevard
Torrance, CA 90505-5010 USA

Tel: 310/784-6990
Fax: 310/784-6980

SalesInfo@micronova-mfg.com
www.micronova-mfg.com